
AIO® Wireless Handheld Remote Controller (WRCH20)

User Guide

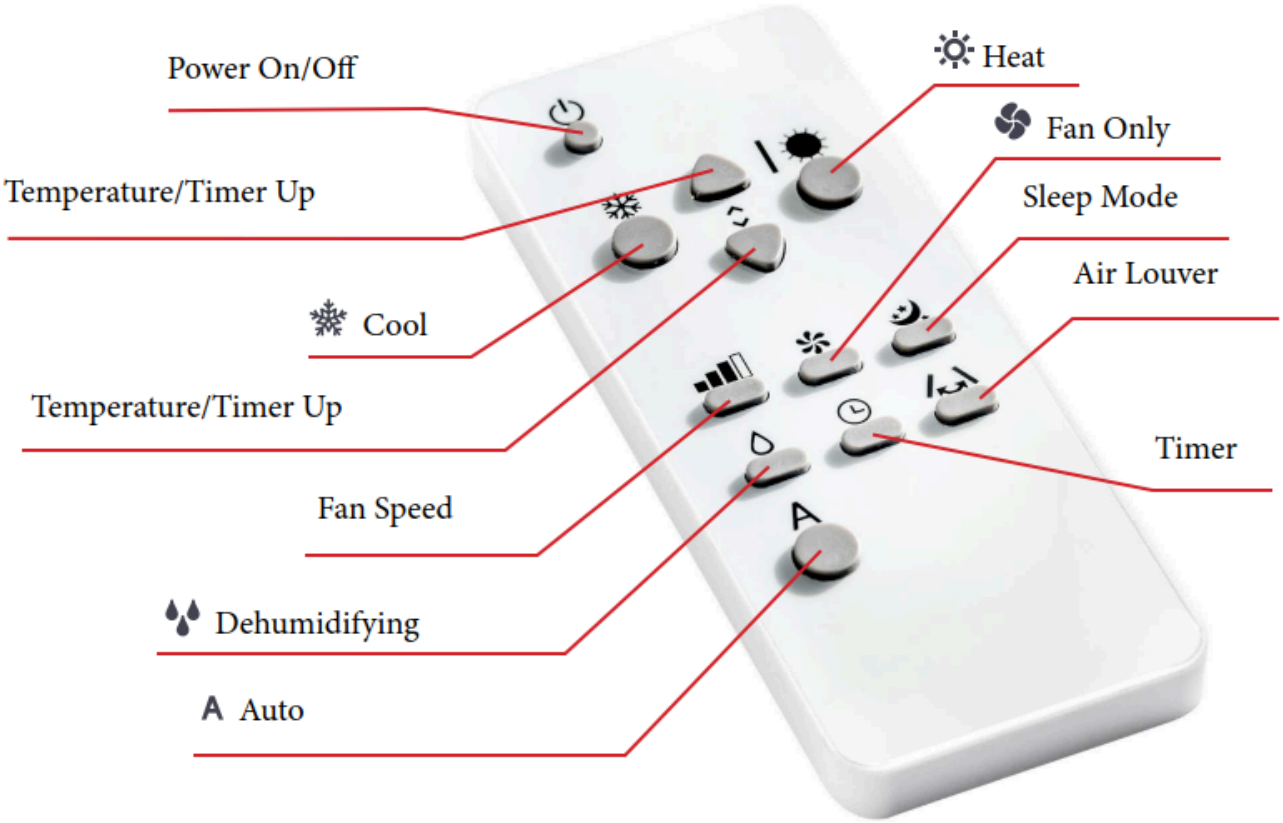

innova

CONTACT INFO

VIP Customer/Technical Support
Email: vip@innova.co
Phone: (212) 204-2700

DISCLAIMER

This documentation is intended for informational use only and should not be construed as a binding representation or contract. This documentation is provided as is without warranty of any kind, either express or implied. INNOVA and its affiliates disclaim all liability arising from the use or misuse of this documentation.

Illustrations may not be to scale, and all information and dimensions stated herein are subject to change at any time at the sole discretion of INNOVA. Benefits described herein apply only to the extent that the product is installed correctly in the correct application and used for its intended purpose.

INNOVA is constantly innovating and improving its products, and reserves the right to modify product design and specifications without notice, without incurring obligations.

AIO® is a registered trademark of INNOVA.

Copyright © 2026 INNOVA. All rights reserved.

1. OPERATION

1.1 Cool

1. If AIO® is off, press the button once to turn it on. (Pressing the button again turns AIO® off.)
2. Press the button to select Cool.
3. The — above the button will remain lit. COOL
4. Set the target temperature using the up and down temp buttons.
5. Set the fan speed by pressing the button until the desired speed is displayed. For more instructions about fan speed, see Selecting Fan Speed.

1.2 Heat

1. If AIO® is off, press the button once to turn it on. (Pressing the button again turns AIO® off.)
2. Press the button to select Heat. HEAT
3. The — above the button will remain lit.
4. Set the target temperature using the up and down temp buttons.
5. Set the fan speed by pressing the button until the desired speed is displayed. For more instructions about fan speed, see Selecting Fan Speed.

1.3 Dehumidify

1. If AIO® is off, press the button once to turn it on. (Pressing the button again turns AIO® off.)
2. Press the button to select Dehumidify. DEHUMIDIFY
3. The — above the button will remain lit.
4. NOTE: There is no option to select fan speed on the dehumidifier.

1.4 Fan Only

1. If AIO® is off, press the button once to turn it on. (Pressing the button again turns AIO® off.)
2. Press the button to select Fan Only. FAN ONLY
3. The — above the button will remain lit.
4. Set the fan speed by pressing the button until the desired speed

1.5 Auto A

1. If AIO® is off, press the button once to turn it on. (Pressing the button again turns AIO® off.)
2. Press the A button to select Heat.
3. The — above the A button will remain lit. AUTO
4. Set the target temperature using the up and down temp buttons.
5. Set the fan speed by pressing the button until the desired speed is displayed. For more instructions about fan speed, see Selecting Fan Speed.

1.6 Air Louvers

AIO® is equipped with a louver that can be fixed or oscillate, when in oscillate mode, the louver will sweep up and down to provide better airflow. When turned off, the louvers remain in their last position when the louver button was pressed.

1. To oscillate the louvers, press the button. The — above the button will remain lit.
2. To disable the oscillating function, press the button again when the louvers are in the desired position.

1.7 Timer

The timer enables a one-time, simple on or off of AIO®.

If AIO® is on and you want AIO® to turn off at a later time:

1. While AIO® is operating, press the button.
2. Use the keys to select how many hours from the current time that you want AIO® to turn off.
3. Press the button again to confirm your selection.

If AIO® is off and you want AIO® to turn on at a later time:

1. While AIO® is operating, press the button.
2. Use the keys to select how many hours from the current time that you want AIO® to turn off.
3. Press the button again to confirm your selection.
4. Once your selection is confirmed, the display will temporarily show the temperature, mode, and fan speed that will be working when the timer activates. The timer button will remain lit.
5. To reset the timer, set the digits to OO.

1.8 Selecting fan speed

When the unit is operating on fan only, cool, heat, or automatic, you can adjust the fan speed by pressing the button until the fan speed display is at the desired speed:

- To select Low, press the button until appears.
- To select Medium, press the button until appears.
- To select High, press the button until appears.
- To select Auto, press the button until appears.
- Text will also appear that indicates the fan speed.

1.9 Sleep function

The sleep function gradually increases the temperature and eventually turns the unit off. Using the sleep mode is an energy-saving feature that also provides restful sleeping conditions.

To activate the sleep function:

1. With AIO® operating, press the button. The — above the button will remain lit
2. Use the keys to set the number of hours you wish the unit to run.

To deactivate the sleep function:

1. Pressing the button again disables the sleep function.

With over 20 years of experience in the climate comfort sector, we have a clear goal: growth through innovation. Our team is laser-focused on the conception, development, and production of innovative heating, ventilation, and air conditioning solutions. This mission has developed through bringing together technical skills, creativity, technology, design, Italian passion, and a global vision to achieve the best energy efficiency and performance.

innova.co | **USA:** 216-710-1000 **Canada:** 416-739-1000

MADE IN ITALY

© 2026 INNOVA. All rights reserved.

Revised August 20, 2026

AIO® Wireless Handheld Remote Controller (WRCH20)
User Guide